Operating Instructions & Parts Manual

Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Retain instructions for future reference.

Floating Pond Pump System

Model 90008

Description

This pump system is designed for decorative use and can improve water aeration. It produces water fountains up to 15' in height, and up to 4,900 gallons of water per hour. Operates in 5 feet of water or deeper.

Unpacking

When unpacking the unit, inspect carefully for any damage that may have occurred during transit.



General Safety Information

Carefully read and follow all safety instructions in this manual and on pump. Keep safety labels in good condition. Replace missing or damaged safety labels.



This is a SAFETY ALERT SYMBOL. When you see this symbol on the pump or in the manual, look for one of the following signal words and be alert to the potential for personal injury or property damage.



personal injury, death or major property damage if ignored.

AWARNING

Warns of hazards that CAN cause serious personal injury or death, if ignored.

ACAUTION Warns of hazards that MAY cause minor personal injury, product or property damage if ignored.

IMPORTANT: Indicates factors concerned with operation, installation, assembly or maintenance which could result in damage to the machine or equipment if ignored.

NOTE: Indicates special instructions which are important but are not related to hazards.



DANGER Never enter the water either wading, swimming or in a boat with the pump power on, as this may result in severe electrical shock.

Read these warnings and instructions carefully. Failure to follow could result in serious bodily injury and/or property damage.



AWARNING

Electrical installations shall be in accordance with National Electric Code (NEC) and all applicable local codes and ordinances. A licensed electrician should

perform installation.



ADANGER "NO SWIMMING" AND

OR WARNING SIGNS SHOULD BE POSTED PER STATE AND LOCAL CODES.

Please affix included warning label to power receptacle or junction box.



AWARNING System furnished with a 100ft power cord with three prong GFI plug. -Must connect to properly grounded receptacle of grounding type. Do not remove ground pin on plug. Do not extend the cord length by splicing or with an extension cord.



AWARNING FAILURE TO CONNECT THIS UNIT, WITH THE GFI, TO A PROPERLY GROUNDED RECEPTACLE MAY RESULT IN SEVERE ELECTRICAL SHOCK.



AWARNING Be sure system is connected to a circuit equipped with a fuse or circuit breaker of ample capacity.

DANGER Always disconnect power source before performing any work on or near the motor or its connected load. If the power disconnect point is out-of-sight, lock it

in the open position and/or tag it to prevent unexpected application of power. Failure to do so could result in fatal electrical shock or bodily injury.



ADANGER DO NOT handle pump with wet hands or when standing in water as fatal electrical shock could occur. Disconnect main power supply before handling system



AWARNING Protect the power cable from coming in contact with sharp objects, oil, grease, hot surfaces or chemicals. DO NOT kink the power cable. If damaged



AWARNING NEVER leave the control box, fused disconnect switch, or covers open (either partially or completely) when not being worked on by a competent electrician

or repairman.



DANGER Always use caution when

operating electrical controls in damp areas. If possible, avoid all contact with electrical equipment during thunderstorms or extreme

damp conditions.



AWARNING Install all electrical equipment in protected area to prevent


mechanical damage which could produce serious electrical shock and/or equipment failure.



ADANGER DO NOT use this system to pump flammable liquids such as gasoline, fuel

oil, kerosene, etc. Failure to follow the above warning could result in property damage and/

or personal injury.



ACAUTION Water leaving nozzle is at high velocity



AWARNING This unit not tested for use in swimming pool areas.

AWARNING GFI plug must be oriented with cord coming out the bottom and protected from direct rainfall.

INSTALLATION INSTRUCTIONS

- 1. Only install this system in ponds where no swimming, wading, boating or fishing is allowed while fountain is operating. Disconnect power to pump before fishing or entering the water.
- 2. Post appropriate warning signs per local and state codes.
- 3. Inspect pump system for damage before installing in pond. Check that all bolts and screws are tight. Check for any bent prongs or a cracked case on the GFI.
- 4. The unit ships with one spray nozzle attached. To change to one of the other 2 nozzles, remove the 4 screws from the nozzle then replace with desired nozzle. Refer to Figures 1, 2 & 3 for spray pattern appearance. Nozzles are marked "This side up." Make sure the o-ring is seated in groove before installing nozzle. Tighten screws until seated, approximately 10 to 12 in-lbs.
- 5. Attach nylon anchor ropes to 3 eyebolts located at top of screen. Secure (make sure rope is tight) to weights placed on pond floor or stakes on pond shore. When using weights to anchor the pump, place weights approximately 10 feet from unit. Alternately, two anchor ropes placed 180 degrees apart can be used, but 3 ropes will provide the best stability.
- 6. Before connecting the unit to the power receptacle, check to insure there is no leakage to ground. This can be done by using an ohm meter and setting the scale to



its highest setting (i.e. Rx100K). Connect one ohmmeter lead to the unit power cord ground (round prong) and to one of the flat prongs. It should read infinite or at least 2 mega ohms. Repeat with the other prong. If reading is below 2 mega ohms on either prong contact Customer Service Help Line listed at bottom of page.

- 7. Do Not Operate System on an Extension Cord. If no power is accessible at the pond, contract a licensed electrician to install the proper power supply in accordance with National Electric Code and all applicable local codes and ordinances.
- 8. After installing the unit, checking ground and connecting power to the unit, the unit can be powered up. Check operation of the GFI by pushing the "Test" button, the unit should stop. Pushing the "Reset" button should restart the unit. If pressing the "test" button does not stop the unit, immediately shut off power to unit and contact Customer Service Help Line listed at bottom of page.

NOZZLE PATTERNS






Figure 1: Water Lily - An eye-catching combination spray. Item #2A



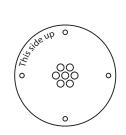


Figure 2: Sky Cannon - A dramatic single plume of water. Item #2B






Figure 3: Water Trumpet - A symmetrical inverted bell shape. Item #2C

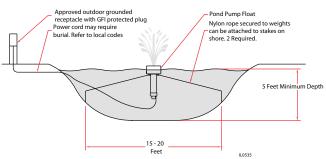


Figure 4: Typical Installation

INSTALLATION CHECK LIST

- Read installation instructions and warnings
- Post appropriate warning signs
- Install desired spray nozzle
- Install and anchor unit in pond
- Check insulation resistance to ground
- Power up unit
- Test operation of GFI by pressing the "Test" Button.
- ☐ File instructions for future reference

REQUIRED TOOLS & SUPPLIES

- #2 Phillips screwdriver
- Nylon rope to anchor unit
- Stakes or weights for anchoring unit
- Ohm meter to check insulation resistance to ground

ACAUTION WINTER STORAGE


• Rinse unit with clean water to remove any build-up on unit.

- Check unit for any damage.
- Store unit in heated space in freezing climates.

The pump motor is water lubricated and is factory filled with an antifreeze solution. During operation the antifreeze may exchange, thru the filtered check valve, with the pond water. In climates where freezing may occur, the unit must be stored in a heated storage space to prevent damage to the motor.

TROUBLESHOOTING GUIDE					
PROBLEM	POSSIBLE CAUSES	CORRECTIVE ACTION			
Unit won't run	Circuit break- er tripped	Reset circuit breaker			
	GFI Tripped	Reset GFI			
No or low spray GFI Trips	Blocked screen or nozzle, miss- ing or dam- aged o-ring, or incorrectly installed nozzle Electrical	Disconnect power. Clean screen and/or nozzle. Check that o-ring is undamaged and seated in groove. Check that nozzle is installed prop- erly (nozzles are marked "This side up"). Check depth of pond. If less than 5 feet deep, move to deeper section. Restart unit. Reset GFI			
	storm can trip GFI Short in sys- tem	Disconnect power and check cord for damage. If cord is damaged contact Customer Service Help Line listed at bottom of page for replacement.			
Unit spins	Anchor rope loose	Check anchor rope and re-attach if necessary			

Item #	Qty	Part No.	Description	
			Screw - #10 x 3/4 Slotted Head or Pan	
1 6 *		*	Head Sheet Metal Screw (18-8 Stainless	
			Steel)	
2A	1	021617	Nozzle - Water Lily	
2B	1	021618	Nozzle - Sky Cannon	
2C	1	021619	Nozzle - Water Trumpet	
3	1	021622	O-Ring - AS568A - 041 (3" ID x 3/18" OD)	
4	6	021628	Bolt - SS 1/4-20 x 3/4	
5	6	021629	Lockwasher - 1/4"	
6	1	021707	Mounting Flange	
7	1	021534	Float	
8	1	021713	Pump End	
9	1	021740	Motor 1/2 HP 115V	
10	4	127021	Locknut - SS 5/16-24	
11	1	021715	100 ft. power cord with GFI	
11A	1	021614	GFI	
12	2	021609	Eye Bolt - SS 1/4-20 x 2-1/2	
13	2	021623	Locknut - SS 1/420	
14	1	021608	Screen	
15	1	021611	Screen Cap	
16	1	021613	Strain Relief	
17	2	021625	Warning Decal	
*Standard hardware item, available locally				

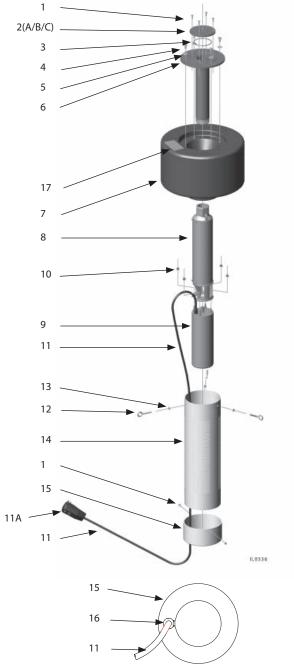

IL0538

Flow (GPH)	Spray Height (Ft.)	Pattern Image	Pattern Name
4900	15	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	Water Lily - 2A
3300	15	000 000 000 000 000 000 000	Sky Cannon - 2B
2700	13		Water Trumpet - 2C